


Nanjing FAME Technology and Trading Co., Ltd


Nanjing JCNANO Tech Co., Ltd

Transferred the film to the target substrate, between the substrate and the film,


The water drain out as much as possible, and then-

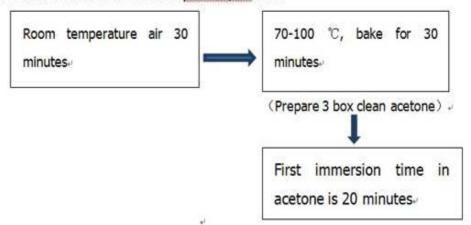

(Then, put the graphene membrane from the first box of acetone in the salvage, in the second box clean acetone.)



(Immediately transfer to the third box of clean acetone from the second box of acetone)



(You can remove the PMMA) ...

南京吉仓纳米科技有限公司技术部

Nanjing JCNano Tceh Co., Ltd

Add: Nnajing Road Jianning No. 241 Room 703 www.jcno.net jc@graphenes.net

Zip: 210015

Tel: 400-025-7300 +86 25 58830538

Fax: +86 25 58837848